

PROWOOD

garden furniture

Montážní(y) návod 10.

Assembly instructions 10.


Montageanleitung 10.

Istruzione per il montaggio 10.


Usine d'assemblage 10.

Manual de montaje 10.


Руководство монтажа 10.

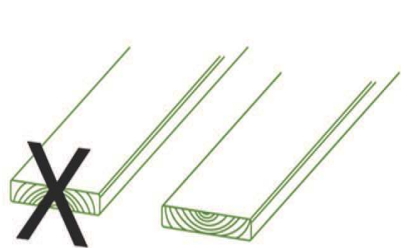

1.

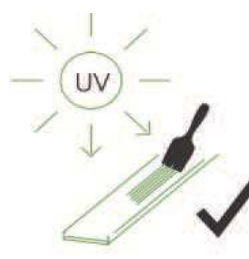


OWATROL PCD 91

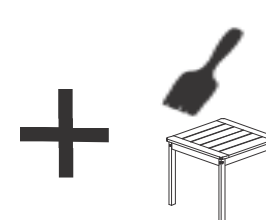


OWATROL AQUADECKS


2.

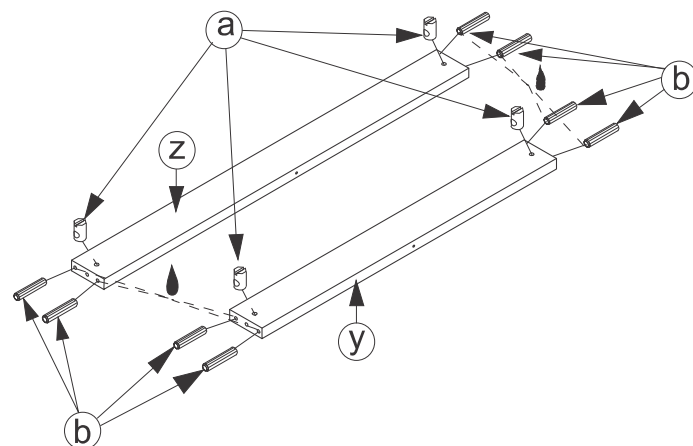


3.

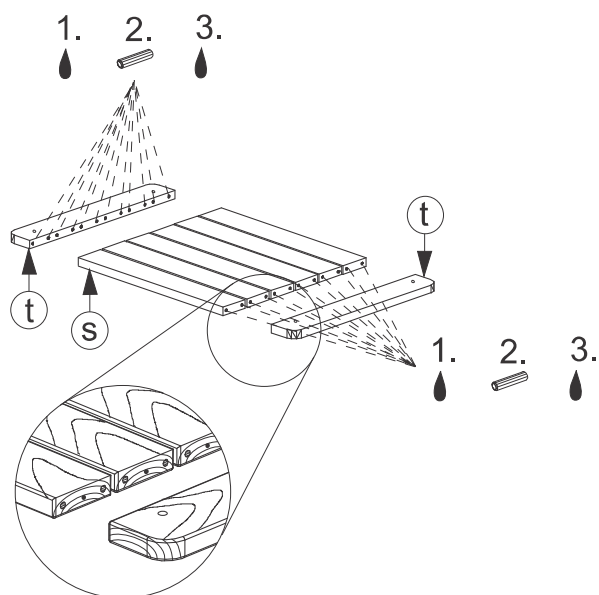


1/2

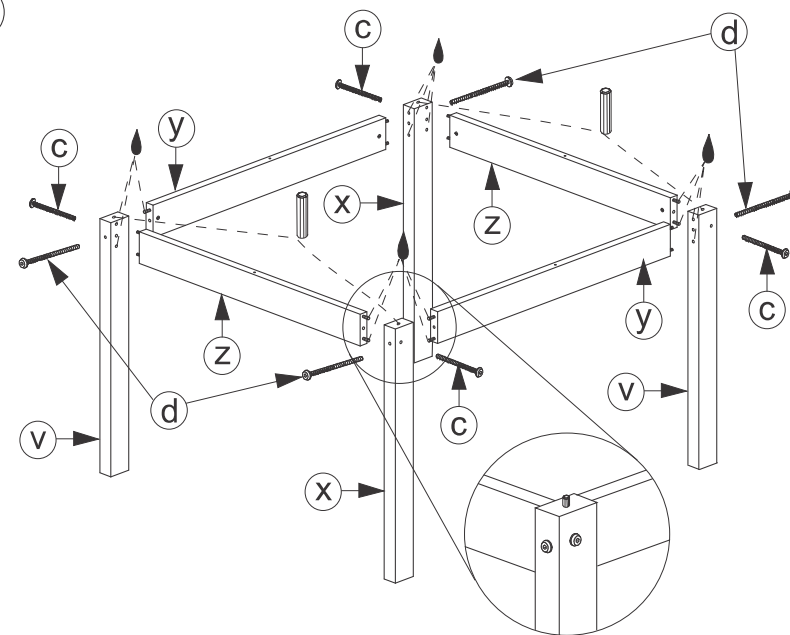







4.

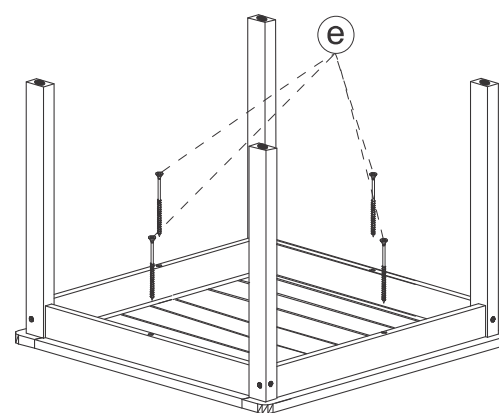

5.

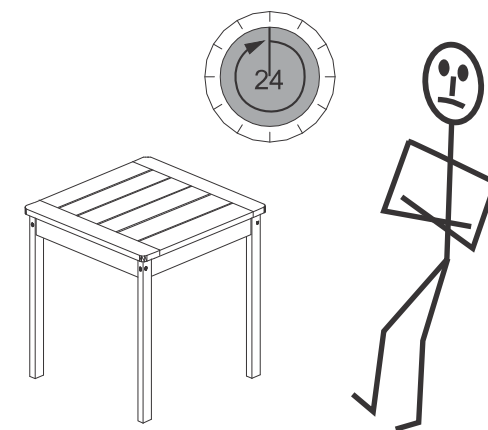

s		26x92x416	8x
t		26x92x800	2x
v		42x68x729	2x
x		42x68x729	2x
y		26x92x401	2x
z		26x92x656	2x

